

APR-L, APR-LVM



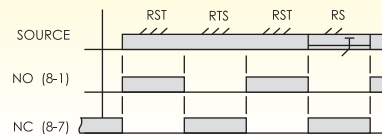 
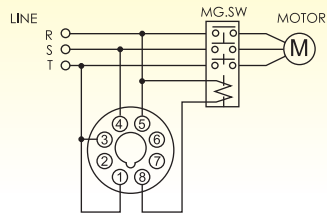 
- With 3 phase voltage detecting to protect motor reversal relay
- Assure the sequence of 3 phase power source to protect motor reversal
- The output relay is energized when the phase sequence is correct and is denergized when the phase sequence is wrong or one phase is lost
- 20% under voltage protection (APR-L)
- 15% over and under voltage protection (APR-LVM)

SPECIFICATIONS

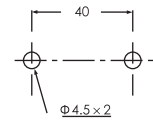 
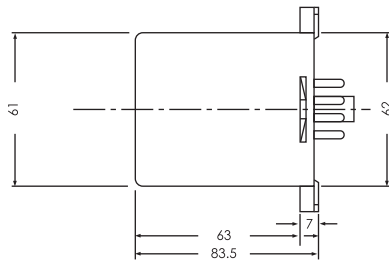 
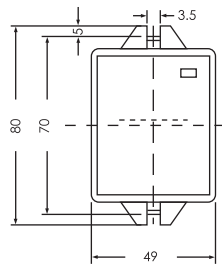 
MODEL		APR-L, APR-LVM
RATED VOLTAGE		AC(V): 220, 240, 380, 415, 440, 480 50/60Hz
INDICATOR OPERATING		Power on
OUTPUT CONTACT		1C 20A
LIFE	MECHANICAL	10 ⁵ times
	ELECTRICAL	5×10 ⁶ times
SETTING ERROR		--
RESET TIME		3 sec
CONSUMED POWER		2VA
AMBIENT TEMPERATURE		-10°C~+55°C
AMBIENT HUMIDITY		45~85%RH
WEIGHT		Approx. 130g

CONNECTION DIAGRAMS & TIMING CHARTS

APR-L, APR-LVM



DIMENSIONS

APR-L
APR-LVM

ANV ELECTRIC CO., LTD.

Kaohsiung Headquarter

No. 151, Jin Shan Road, Kaohsiung, Taiwan
Tel :+886 7 359 5833 Fax :+886 7 359 5822
E-Mail : anv@anv.com.tw

Taipei Office

No. 166, Fu Xing 3rd Street, Taishan Dist.,
New Taipei City, Taiwan
Tel :+886 2 2296 3133 Fax :+886 2 2296 3233
E-Mail : taipei@anv.com.tw

Tainan Office

No. 60, Lin Sen Road Sec. 1, Tainan, Taiwan
Tel:+886 6 216 0988 Fax:+886 6 216 0388
E-Mail : tainan@anv.com.tw

ANV ELECTRIC (HK) LTD

Flat 4, 14/F., Block 4, Wai Wah Centre,
Shatin, N.T., Hong Kong
Tel :+852 2690 2588 Fax :+852 2690 2511
E-Mail : anv@anv.com.hk

Taichung Office

No. 532, Wen Hsin Road Sec. 1, Taichung, Taiwan
Tel :+886 4 2320 9930 Fax :+886 4 2320 9960
E-Mail : taichung@anv.com.tw

ANV ELECTRIC (M) SDN. BHD

25-1, Jalan 1/116B, Kuchai Entrepreneur's Park,
Off Jalan Kuchai Lama, 58200 Kuala Lumpur, Malaysia
Tel :+60 3 7980 3328 Fax :+60 3 7980 3779
E-Mail : anv@anv.com.my