

APT1 / APT1-B  
WEEKLY PROGRAMMABLE TIMER

## MANUAL



## WARNING

Indicating a message. If not complied, May cause a misoperation to cause a person to receive Damage or property damage.

This product contains battery! battery may be in danger of leaking or explosion and causing personal injury.  
Do not use the product at temperature of more than 55 degrees Celsius. Do not contact with liquid.  
Battery life depends on the usage.

## CAUTION

Do not contact the terminal when the power ON.  
This may be caused by an electric shock or personal injury.  
terminal cover must be installed after the wiring.

Do not use in places with inflammable and explosive gases.

Please cut off the power of the load or manual output to OFF and confirm the security of the system before changing the setting. Otherwise, it may cause damage to the machine.

Serious injury may occasionally occur due to fire or explosion of a battery, or leakage from a battery. Never attempt to short the positive and negative terminals, recharge, disassemble, deform by applying excessive pressure, or expose the battery to fire.


## NOTICE

1. Have the Timer installed only by qualified electrical workers.
2. Use the Timer within the specified ratings for operating temperature and humidity.
3. The Timer is not waterproof or oil resistant. Do not use it in locations subject to water or oil.  
Do not use the Timer in locations subject to excessive dust, corrosive gas, or direct sunlight.
4. Be sure to wire the terminals correctly and correct polarity.
5. Take adequate protective measures (such as a breaker, or fuse) for the power supply of the Timer.
6. Do not touch the input terminal while power is being supplied; touching live terminals may result in electric shock.

## SPECIFICATIONS


Model	APT1	APT1-B
Rated Voltage	12~60VDC/AC, 100~240VAC/DC 50/60Hz	
Voltage Range	Rated 90~110%	
Contact Rating	250VAC 15A Resistive load	
Mounting & Socket	Surface: P2CF-08 Flush: Y-50+US-08; Y-50+P3G-08	
Indicator Operating	ON: Green OFF: Red	
Backlight	---	○
Life	Mechanical: 500000 times Electrical: 100000 times	
Dielectric Strength	1000V AC for 1 minute between input terminals and case(ground) 1500V AC for 1 minute between output terminals and case(ground)	
Power Consumption	Approx. 3VA	
Ambient Temperature	-10°C~+50°C	
Ambient Humidity	45~85%RH	
Weight	Approx. 130g	

## PARTS DESCRIPTION

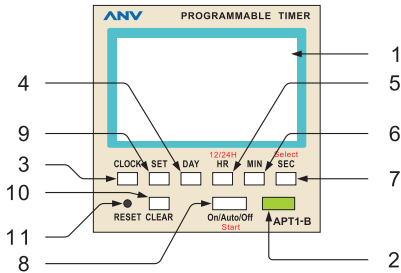

SYMBOL	NAME	FUNCTION
1	LCD Display	Display working status (See DISPLAY DESCRIPTION table)
2	Output Indicator	ON: Green light; OFF: Red light
3	Clock Key	Shift key of clock setting
4	Week Key	Weekday setting; 15 options for choose
5	Hour Key / 12/24H Key	Hour setting / Change clock mode 12H/24H
6	Minute Key	Minute setting
7	Second Key	Second setting
8	Manual Output Key / Start Key	Keep output contact state open or close / Start program
9	Program Key	Program number setting; Maximum of 30 programs ON/OFF
10	Clear Key	Clear setting
11	Reset Key	Hold down 2 seconds to reset and restore manufacture default


## DISPLAY DESCRIPTION

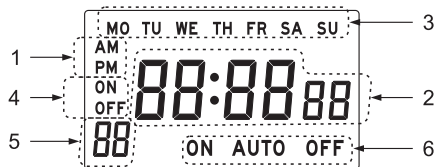

SYMBOL	DESCRIPTION
1	Display AM or PM
2	Display hours, minutes and seconds
3	Display weekly
4	Display program ON or OFF
5	Display program number
6	Display output status (Flicker is manual output mode)

\* When switch to Auto mode from ON or OFF, output contact will be kept in the previous mode. Then, output contact will be controlled by program setting.


## DIMENSIONS

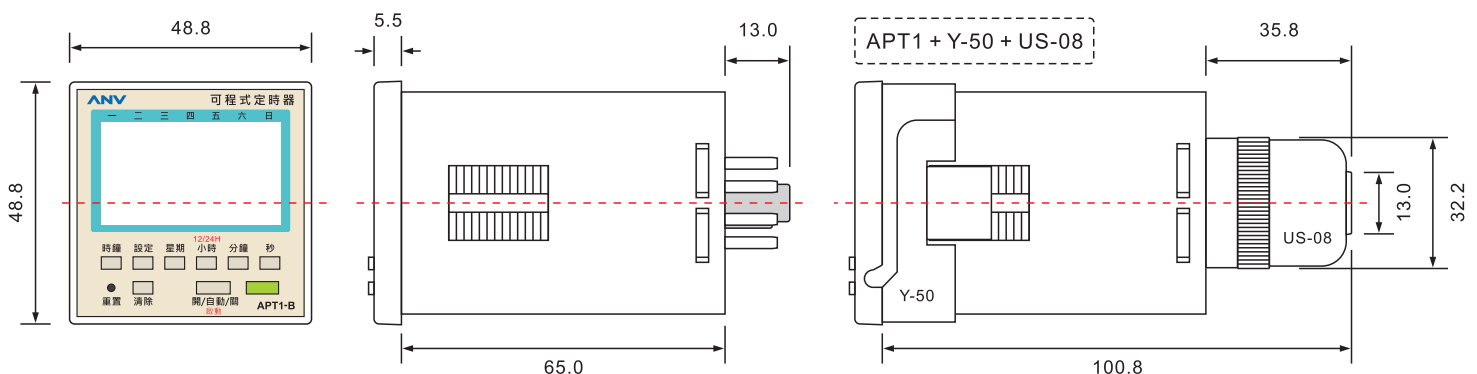


## POWER BACKUP FEATURE

The timer retains clock operation and program memory when external power fail. With external power failure, the contact position will be held in OFF position until the power is restored.

See right chart:

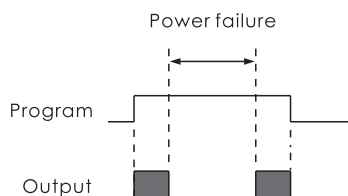

## PROGRAM OVERLAPPING TIMING CHART

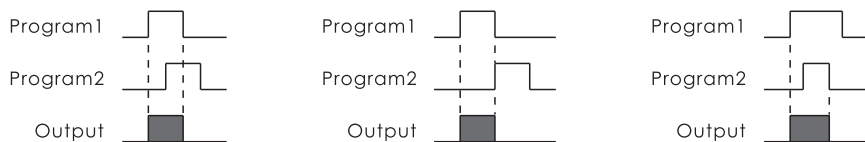


## CLOCK SETTING METHOD

- Press **CLOCK** key+ **DAY** key set the current weekday
- Press **CLOCK** key+ **HR** key set the current hour
- Press **CLOCK** key+ **MIN** key set the current minute
- Press **CLOCK** key+ **SEC** key set the current second


## WEEKLY SETTING Table

	MO	TU	WE	TH	FR	SA	SU
1	●	●	●	●	●	●	●
2	●	●	●	●	●	●	
3	●	●	●	●	●		
4						●	●
5	●						
6		●					
7			●				
8				●			
9					●		
10						●	
11							●
12	●	●	●				
13				●	●	●	
14	●		●		●		
15		●		●		●	

## PROGRAM TIME SETTING METHOD

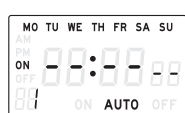


Press **SET** key into the program 1 of output ON settings.

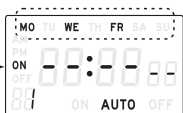


Press **DAY** key set the weekday. Only 15 options can choose. See WEEKLY SETTING table.



Set the time with **HR** key and **MIN** key and **SEC** key. Press **CLEAR** Key clear time.

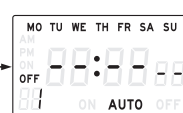


Press **SET** key into the program 1 of output OFF settings.

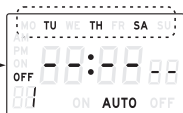

Press **DAY** key set the weekday. Only 15 options can choose.



Set the time with **HR** key and **MIN** key and **SEC** key. Press **CLEAR** Key clear time.

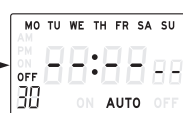


Press **SET** key into the program 2; and the like. Maximum of 30 program of output ON and output OFF.




Press **Start** key to start run program. In RUN mode, Display the current program ON or OFF.

## CONNECTION DIAGRAMS

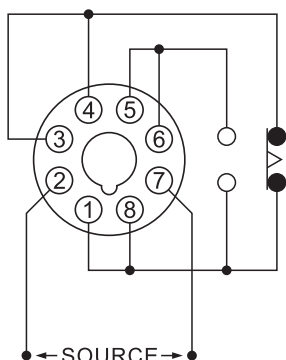

## HOLE SIZE

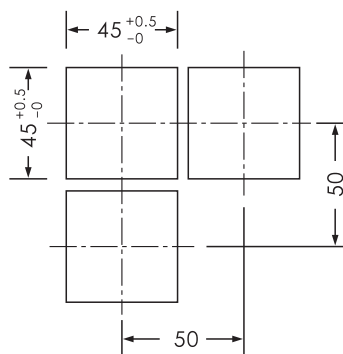

## PRODUCT

- Timer
- Counter
- Level Switch
- TF Series PID Temperature Controller
- Protective Relay
- Solid State Relay
- Panel Meter
- Power Relay
- Limit Switch
- Accessories
- Thermocouple
- Temperature Controller
- PID Temperature Controller

## ANV ELECTRIC CO., LTD.

Kaohsiung Headquarter : No. 151, Jin Shan Road, Kaohsiung, Taiwan  
Tel : +886 7 3595833 Fax : +886 7 359 5822  
E-mail : anv@anv.com.tw Http://www.anv.com.tw